



BOTTLE STOPPER

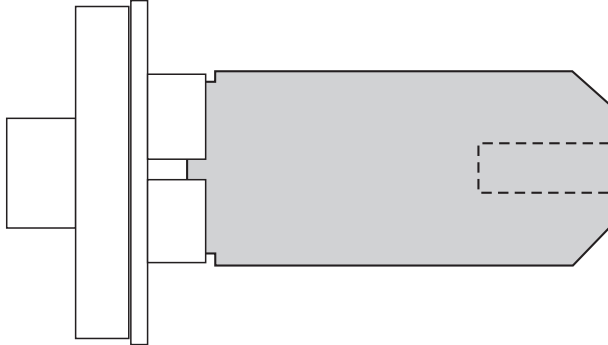


Mount a 85mm x 40mm x 40mm block by the corners in a 50mm chuck.

Drill a 10mm hole 20mm into the end.

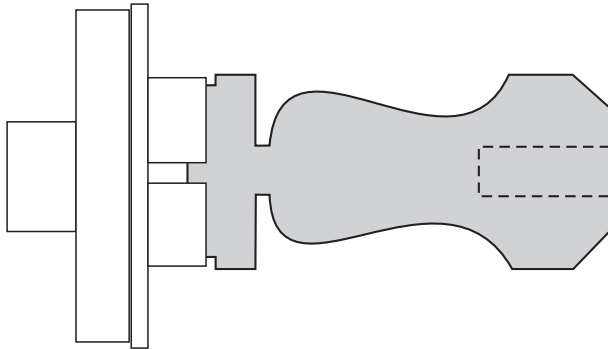


Work on towards the headstock creating the shape of your choice. When the headstock end is narrowed ready for final parting off, sand and finish the work.

Part it off and decorate the parting area with some dremel work.

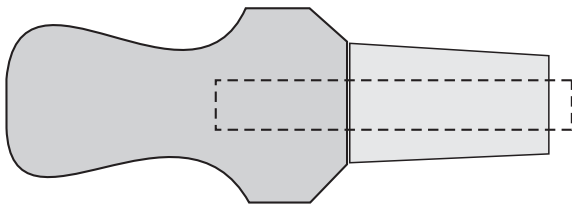

Glue a 55mm long piece of 10mm dowel into the 10mm hole. Then glue a pre-drilled cork onto the dowel.

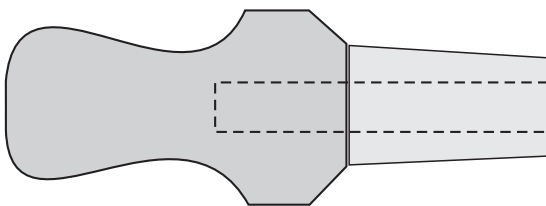

Trim off the end of the dowel and sand that surface.