


## Spoon


There are many options for the final shape of the scooped or curved working end of the spoon and for embellishments you may make on the handle. Start with a 25mm thick x 60mm wide x 350mm long piece of wood with straight grain.




Draw the planned finish shape on the wood.

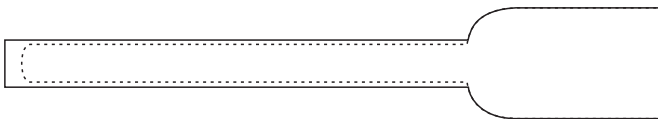


Saw the handle to the same width as the thickness of the board you are using. You may continue this cut to the exact curve of the working end of the spoon.

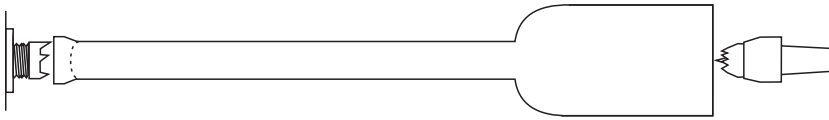

Mark the centres of both ends of the wood. Mount it on the lathe between a small spur drive and a small live tail. Turn the handle to be round and not thinner than 20mm. Sand this area.

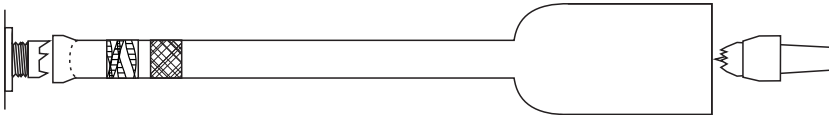

Use the tools of your choice to embellish an area towards the end of the handle. Frame this embellishment with a burnt line or a cut with a sharp tool.

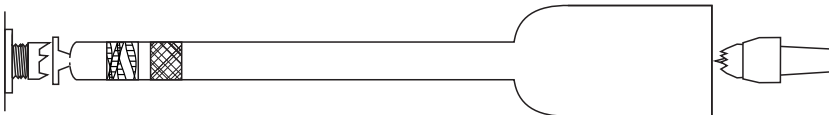

Part the work off at the headstock end and hand-finish that area. Now, you may cut or carve the working end of the spoon to a shape of your choice.