



A Curved Scoop

The instructions here are to make a scoop about 175mm long with a 75mm scoop in the end. But you may make one to whatever sizes and proportions you like


Start with a blank 70 x 70 x 210mm. Mount this between centres, round off and turn a spigot on one end.

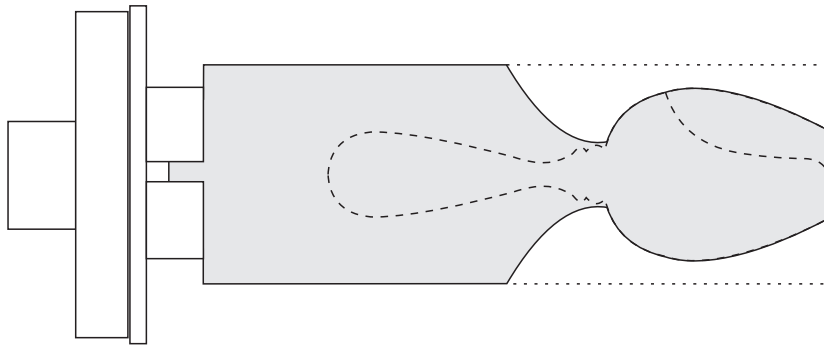

Remount by the spigot in a scroll chuck. Cut the outside of the scoop to shape but not right down to the thinness of the handle.

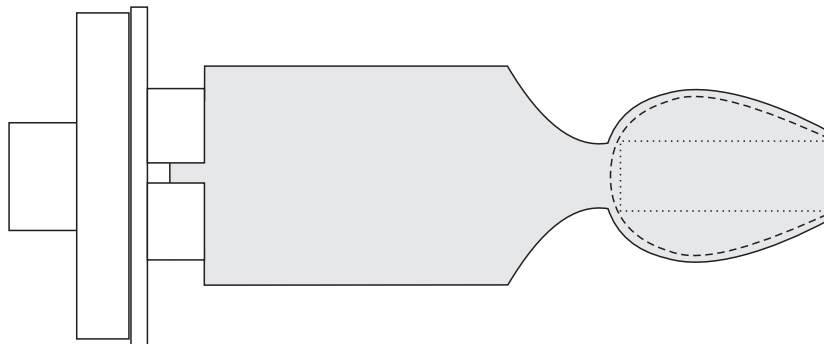


Drill the centre out of the scoop and then continue to hollow the inside. Wall thickness should be even as it will be exposed later. Finish and sand the inside.

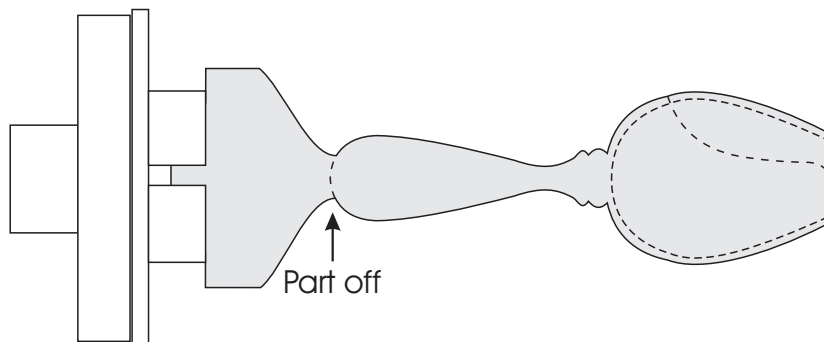

Work the very bottom of the outside of the scoop and the handle down to shape while leaving an adequate attachment to the chuck. Sand and finish the outside of the scoop and handle.

Part off. You can do this carefully, and to a shape, if you plan to hand sand or dremel the end. Or you can use the remaining wood to make a jam chuck to remount the scoop by the cup end.

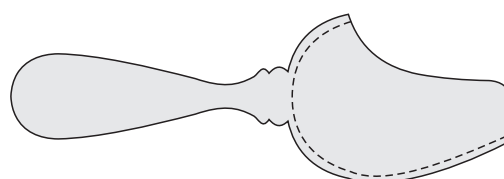

Bandsaw off the unwanted part of the scoop. Sand the cut edge to shape and add your desired finish.