



## A Straight Scoop

The instructions here are to make a scoop about 175 mm long with a 75 mm scoop in the end. But you may make one to whatever sizes and proportions you like.


Start with a blank 70 x 70 x 210 mm. Mount this between centres, round off and turn a spigot on one end. Remount by the spigot in a scroll chuck.

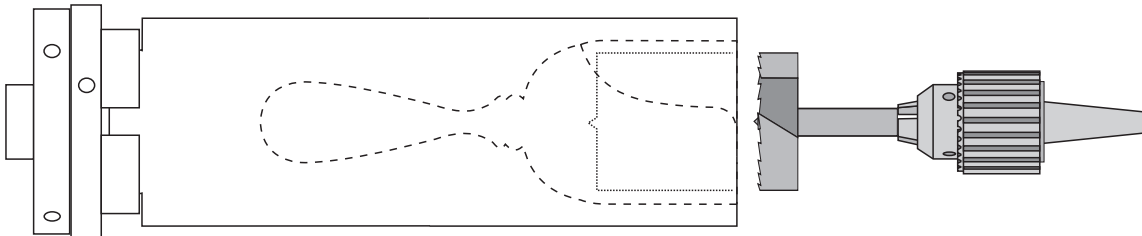


Drill the centre out of the scoop with a forstner bit or other drill to the size and depth of your choice.

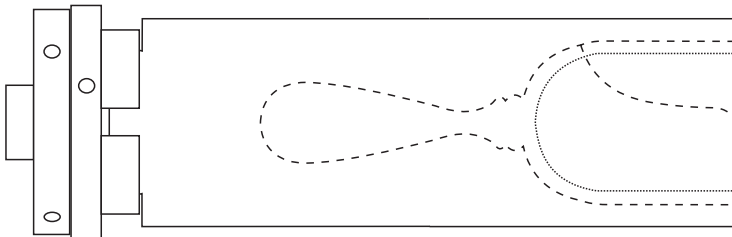

Complete cutting the inside of the scoop to your desired shape. Sand the inside to finished quality.

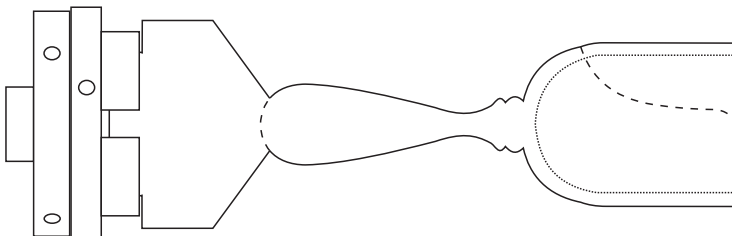

Cut the outside of the scoop to shape and wall thickness of your choice. Then turn the handle to a level that is ready for parting off.

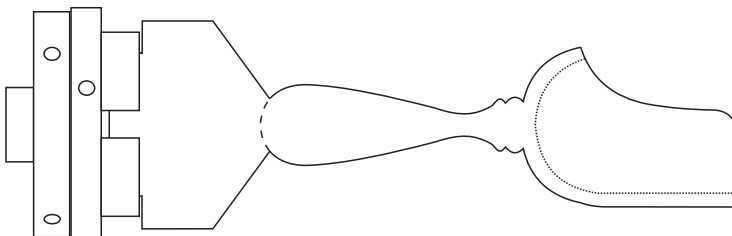

Use a coping saw to cut away part of the hollowed end of the scoop. Sand this cut. Add a finish of your choice to the scoop. Part it off, with a curved cut if possible. Hand sand and finish this cut end.

