

# ***CONTRASTING WOODS***



**Grain direction** *All edges end grain*



**Grain direction** *All edges end grain*



**Grain direction** *All edges end grain*




**Grain direction** *All edges end grain*




**Grain direction** *All edges end grain*




**Grain direction** *All edges end grain*

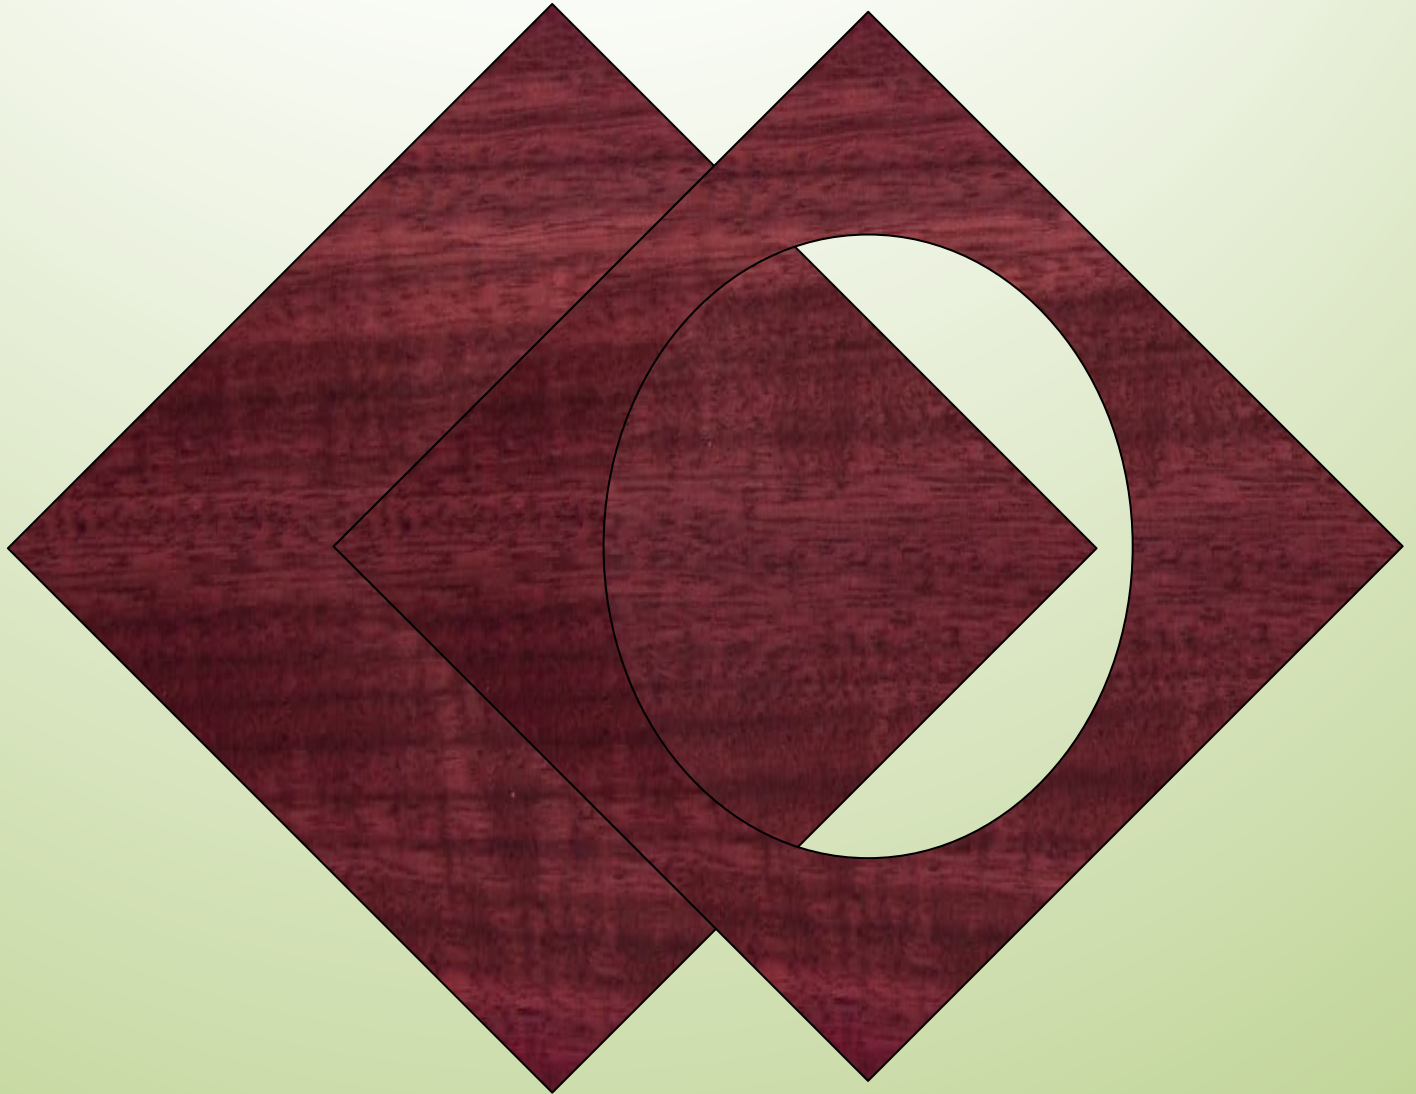

# ***Elliptical***

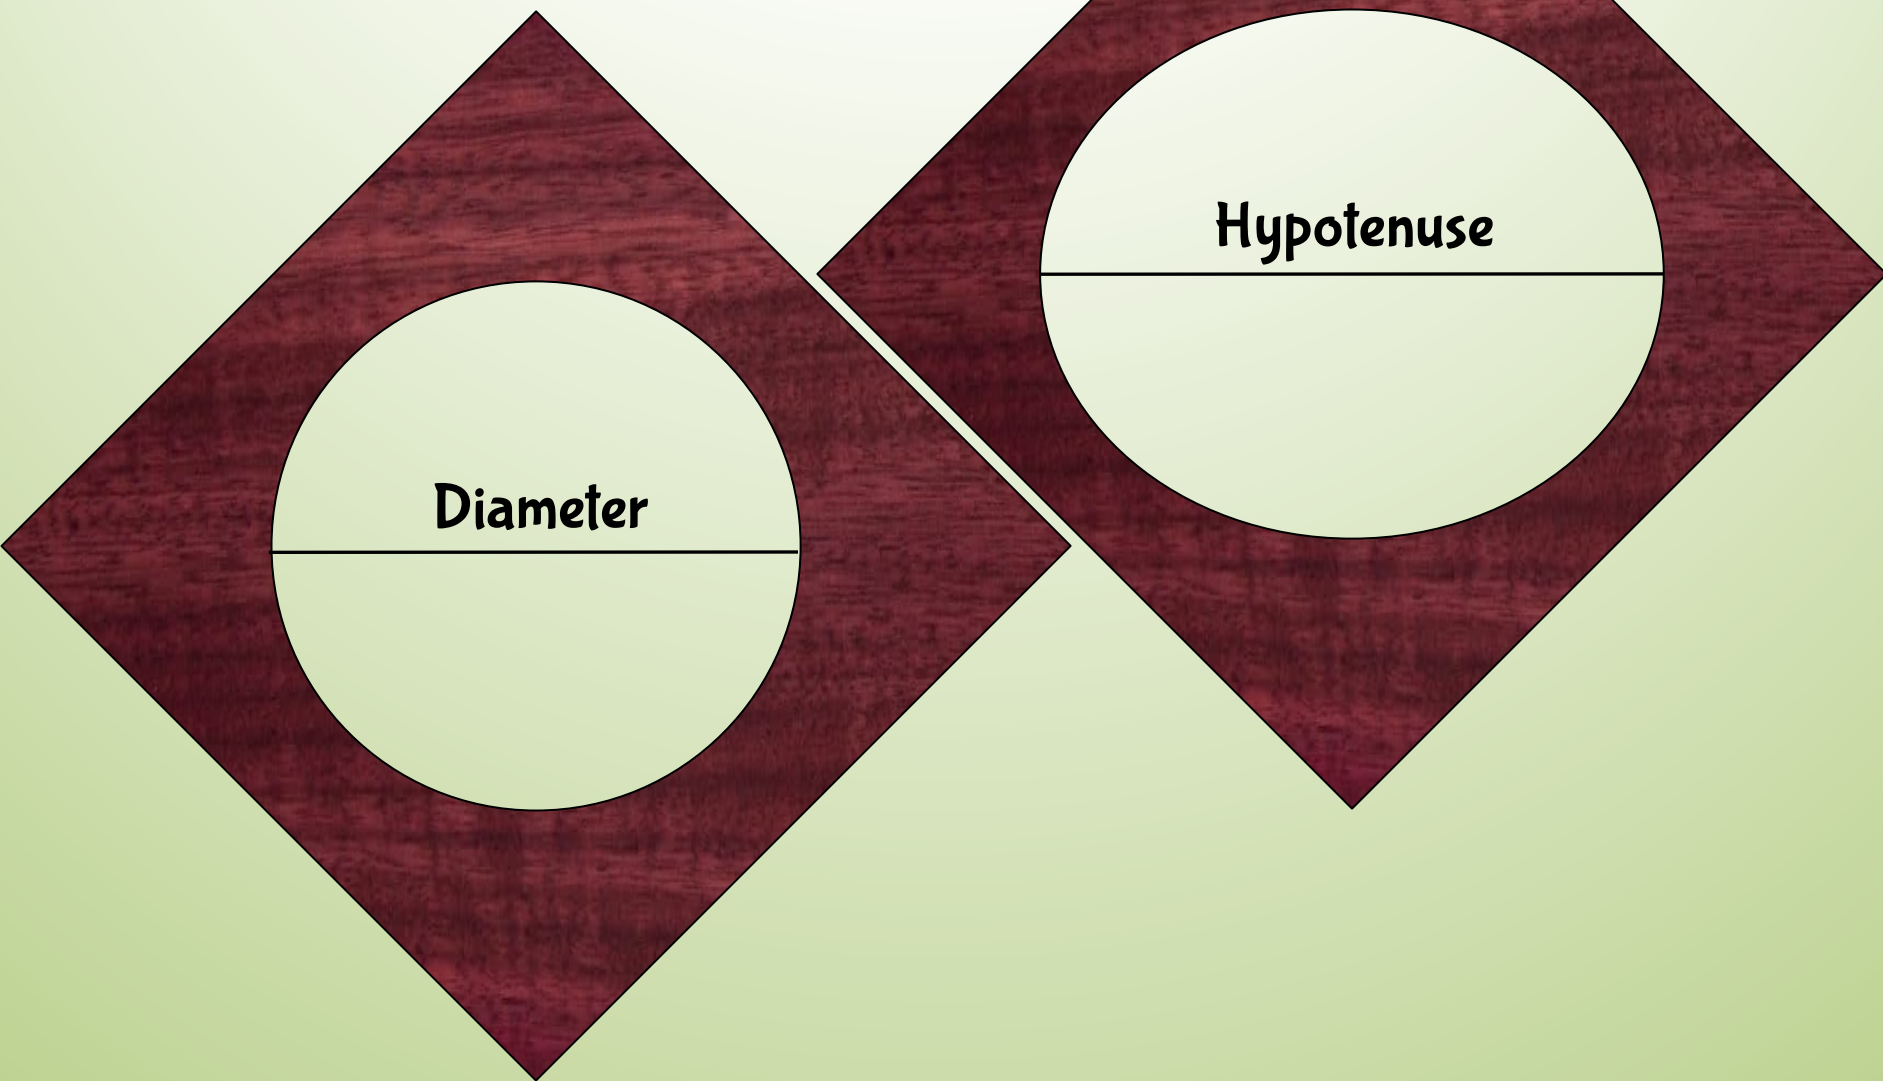

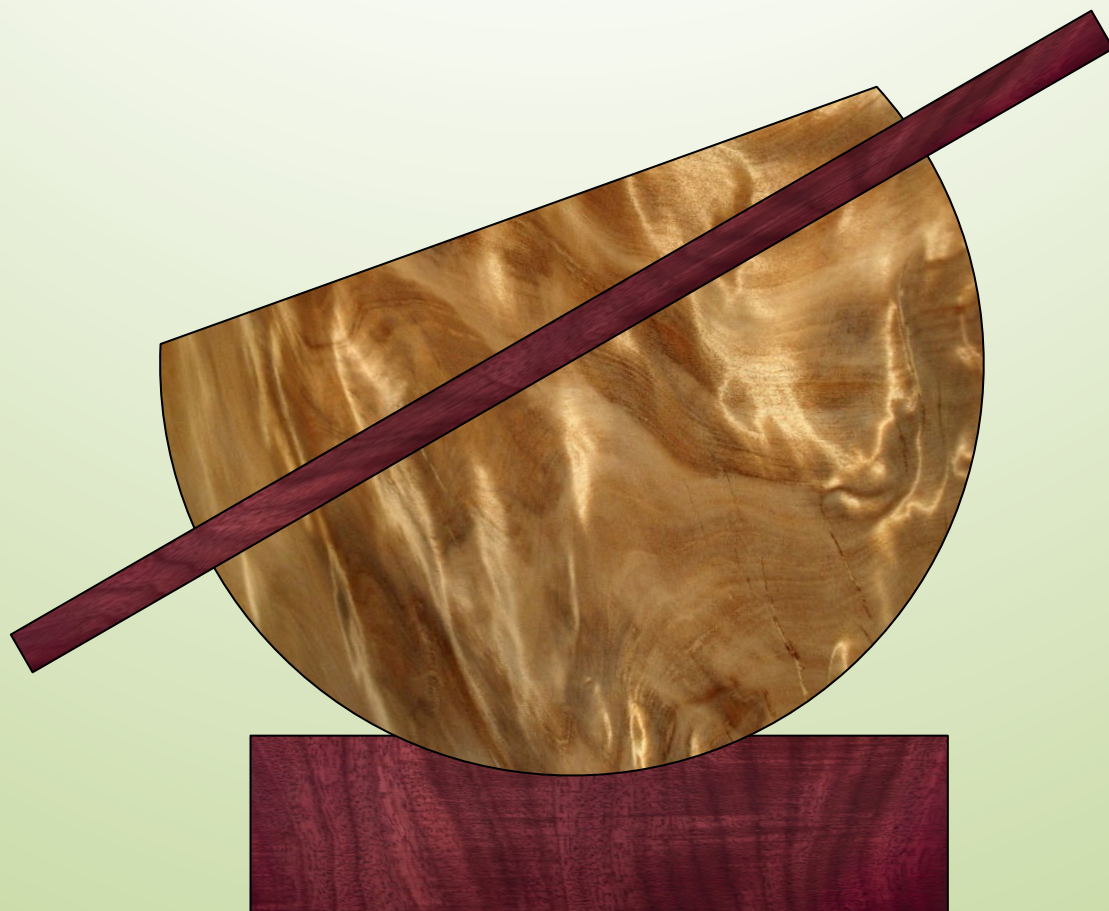





# ***TIPS TRICKS OF THE TRADE***


***FAST SANDING SPEED, KEEP ABRASIVE MOVING, USE  
LIGHT PRESSURE  
USE BACKING WITH SANDING, RESIST OVER SANDING***



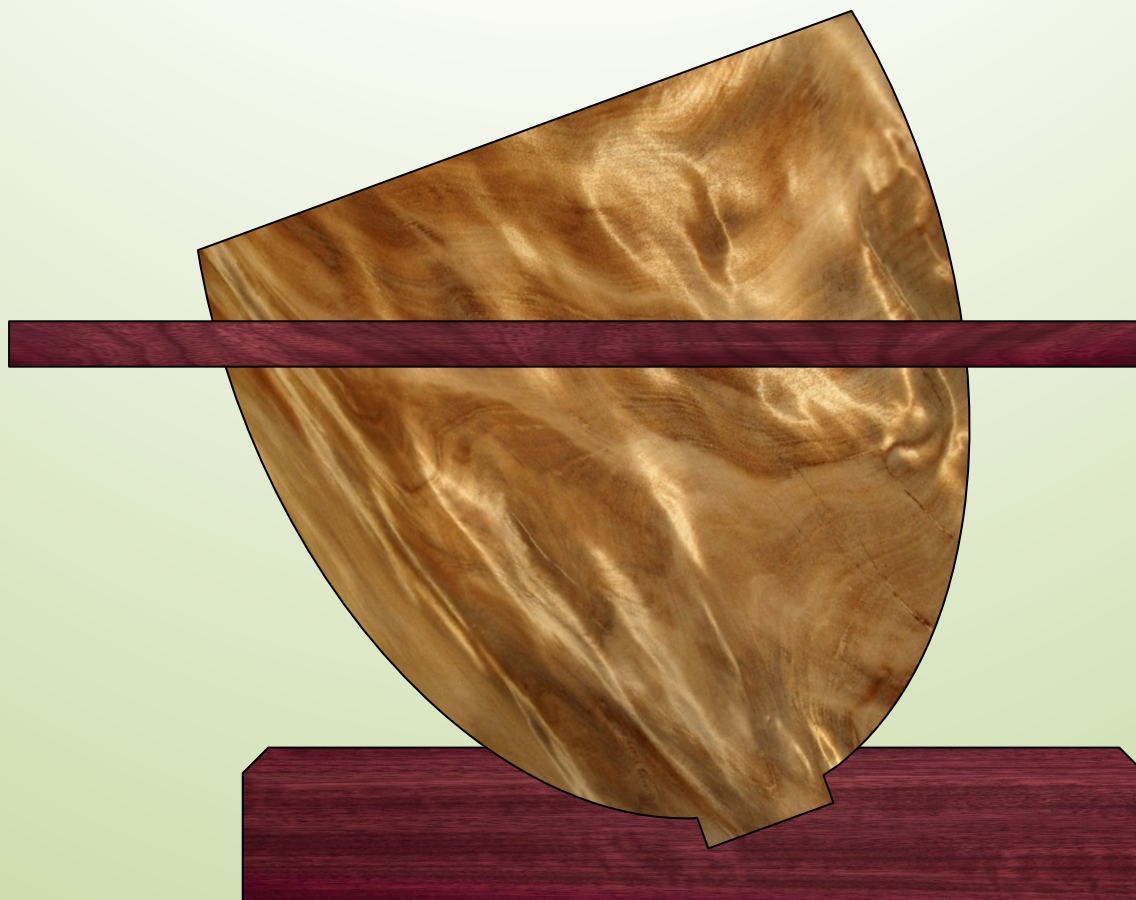


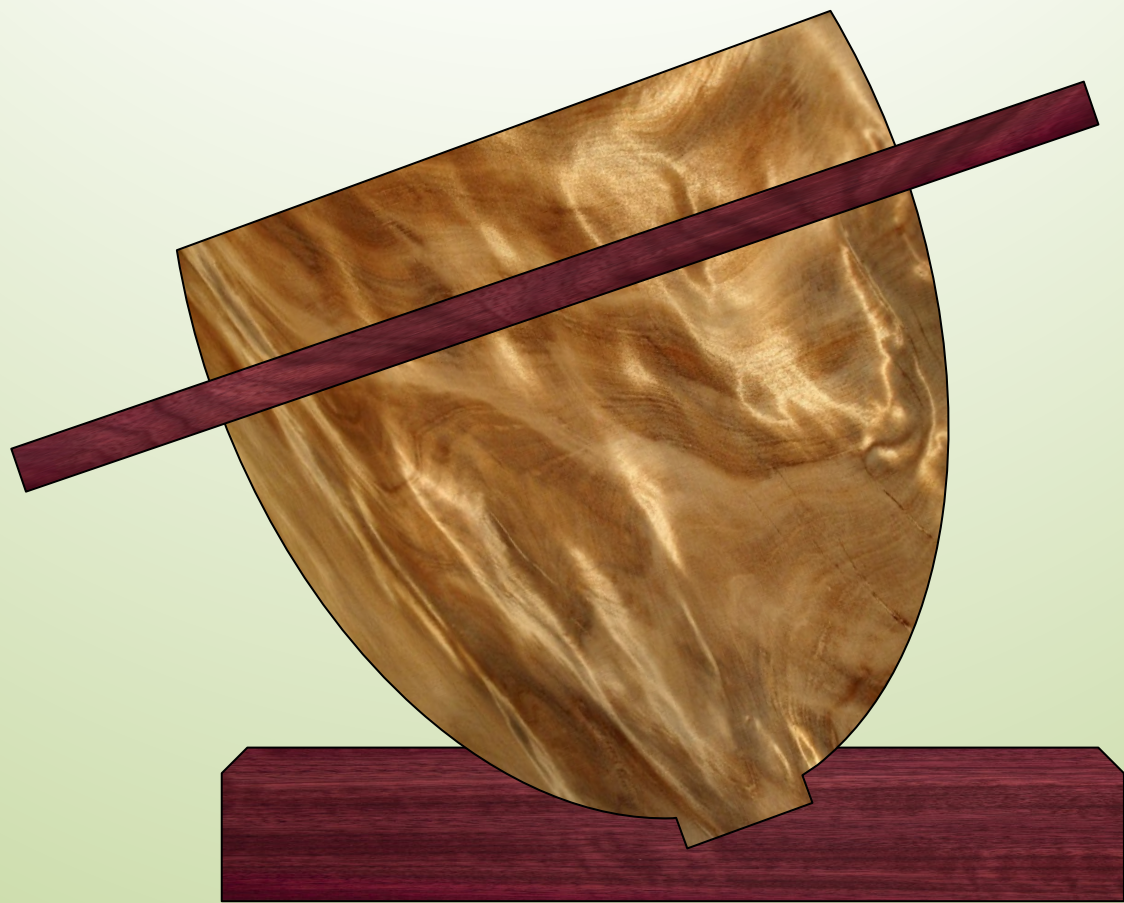




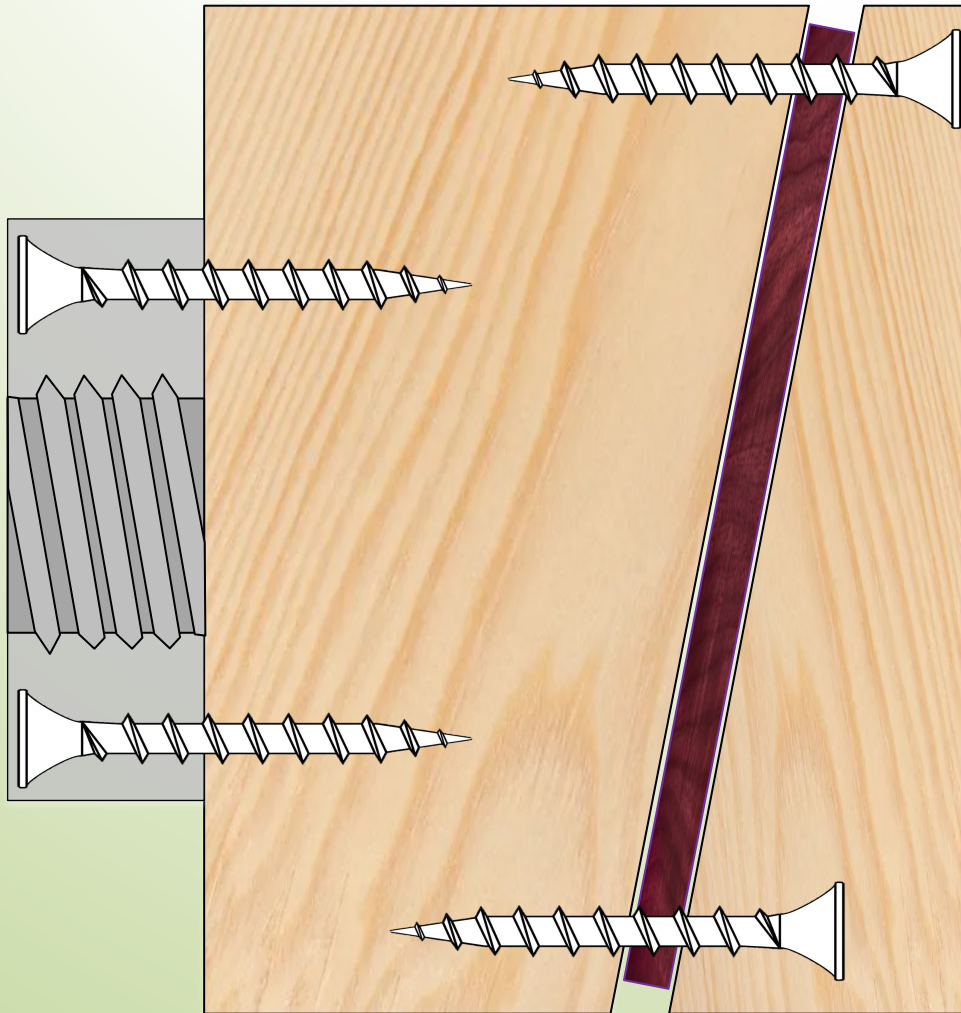


***MOUNT SACRIFICIAL WOOD TO FACE PLATE***

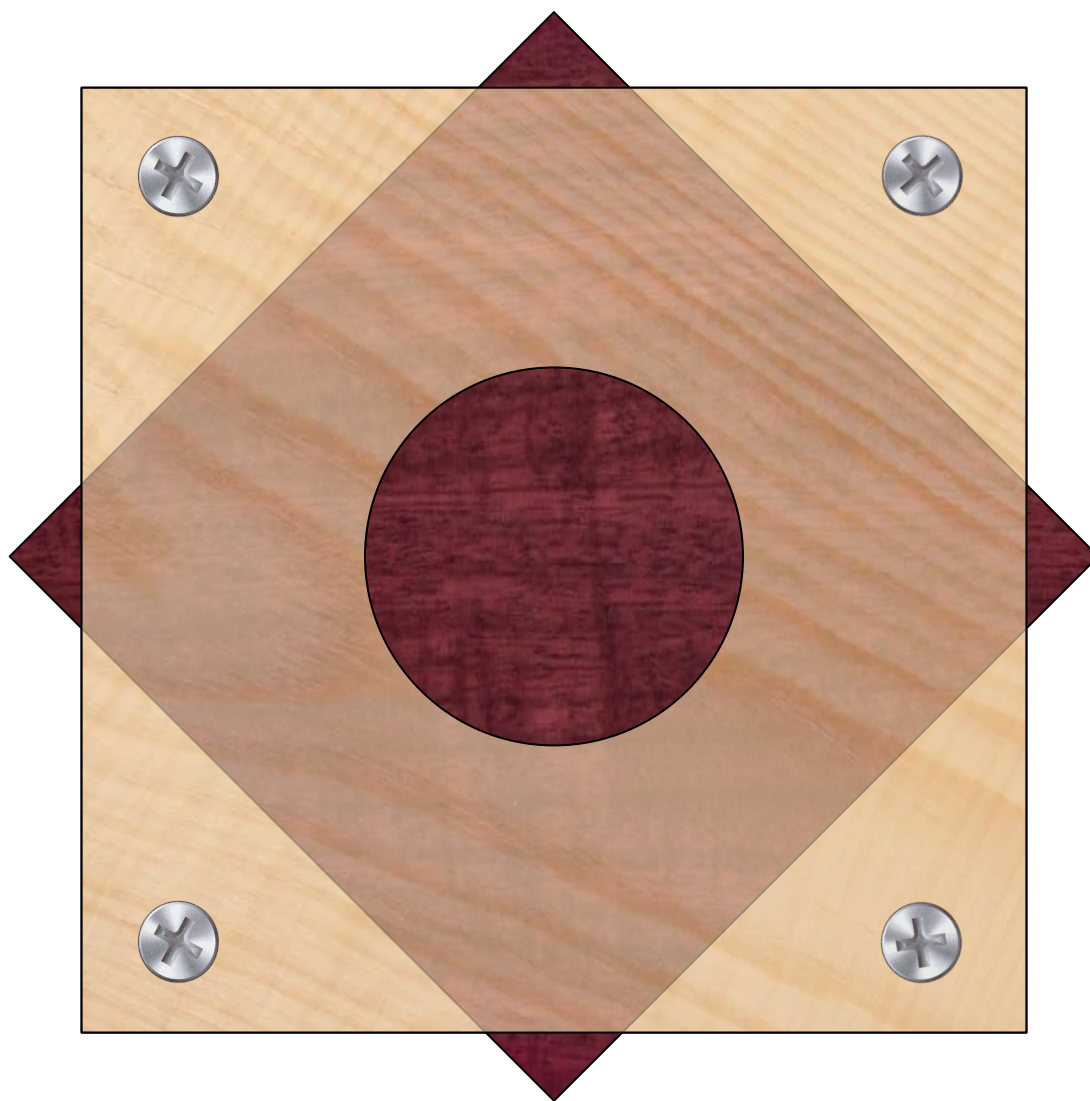


***MOUNT AT 45°***

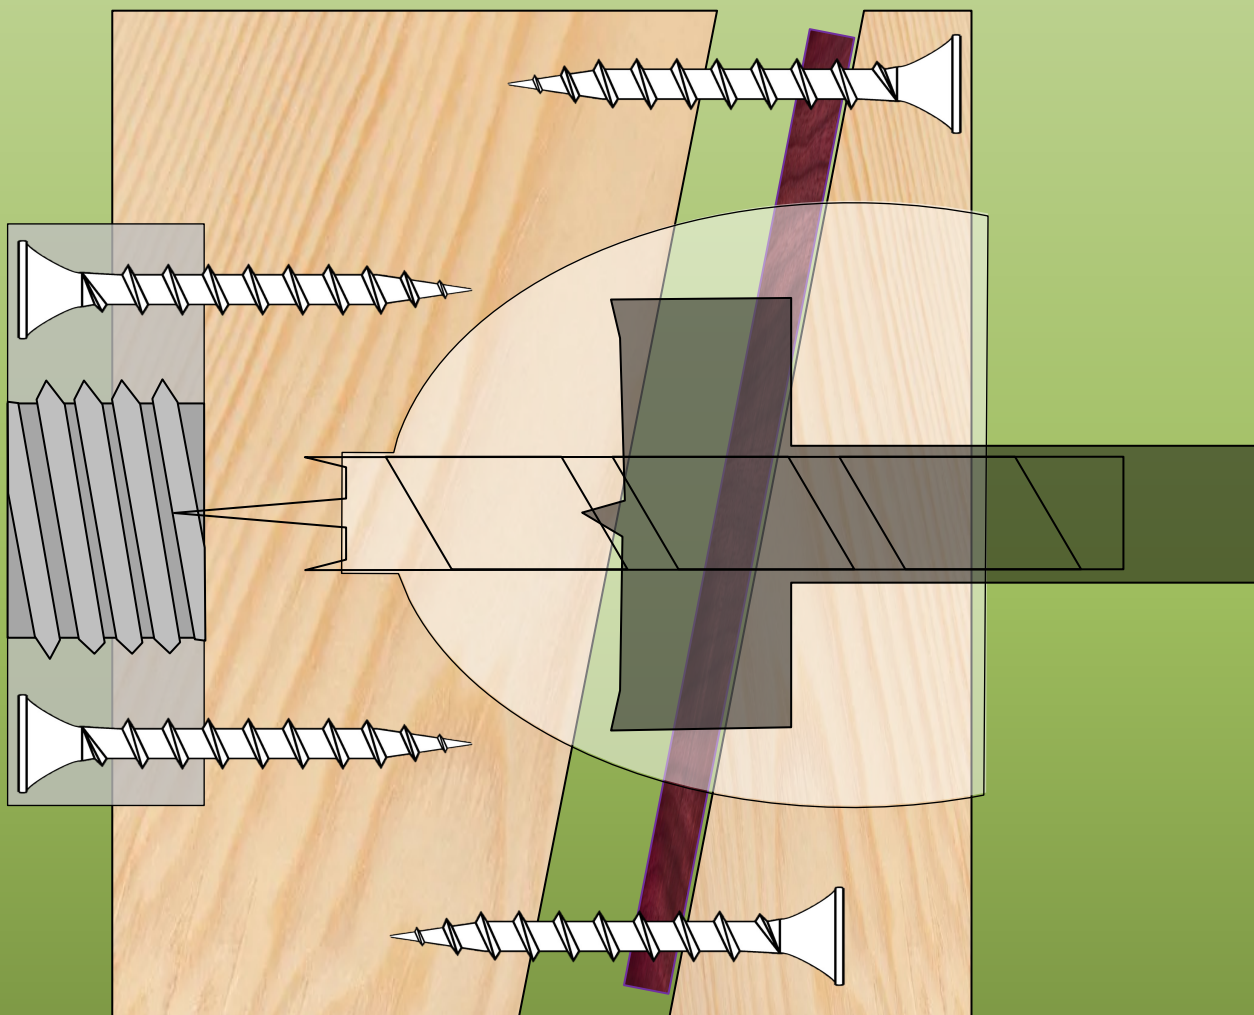


***REMOVE BULK OF WITH A DRILL BIT***

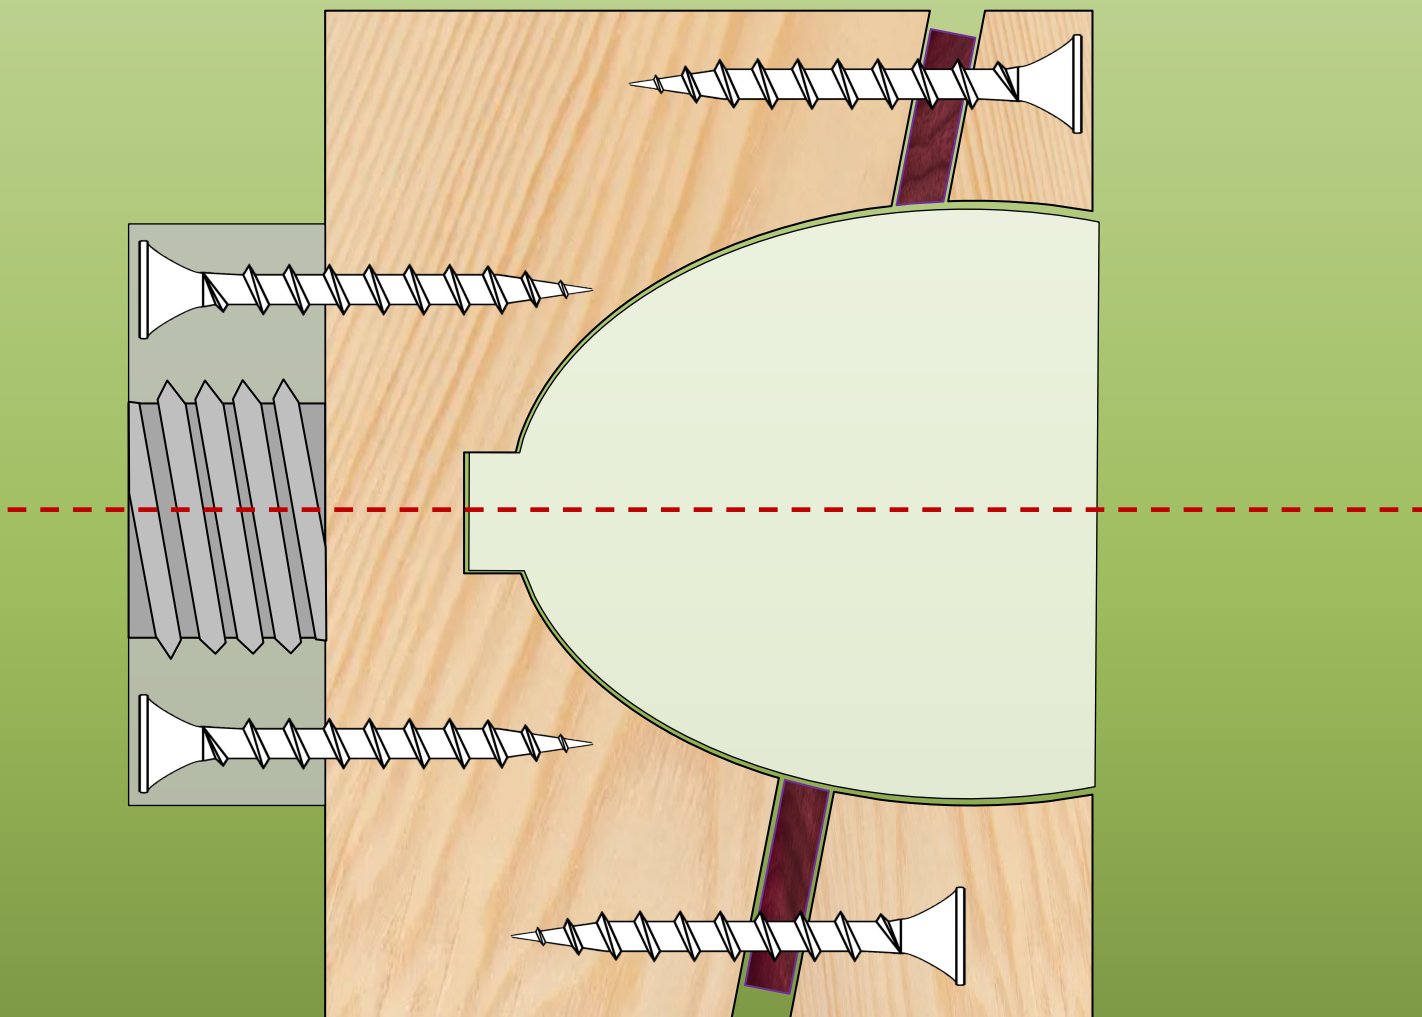


***SPIGOT RECOMMENDED***

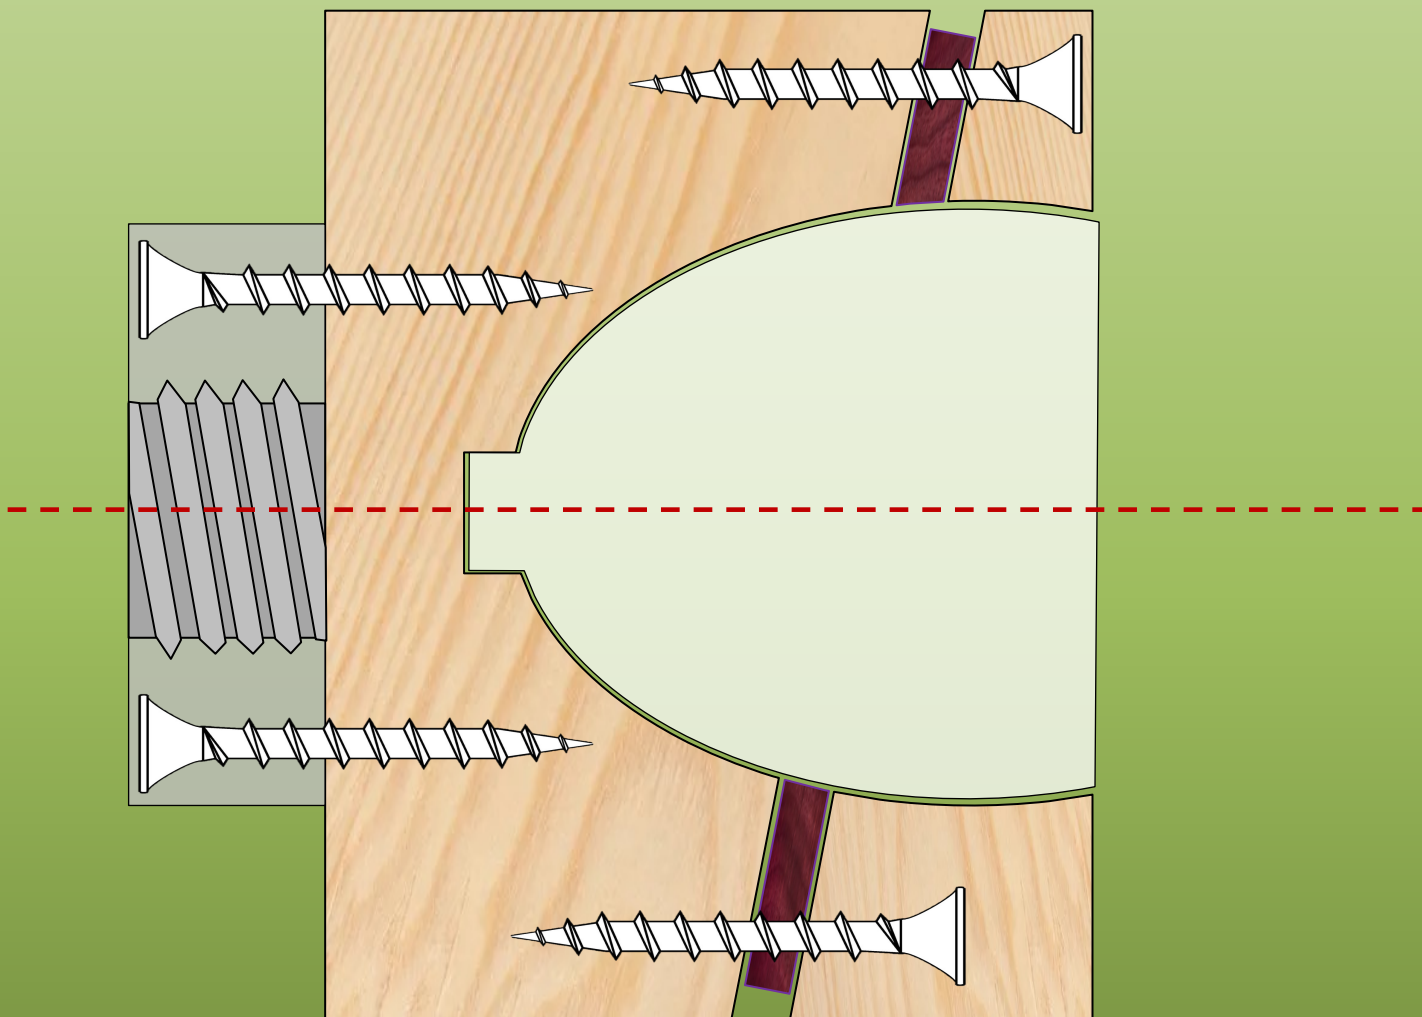



***SPIGOT RECOMMENDED***

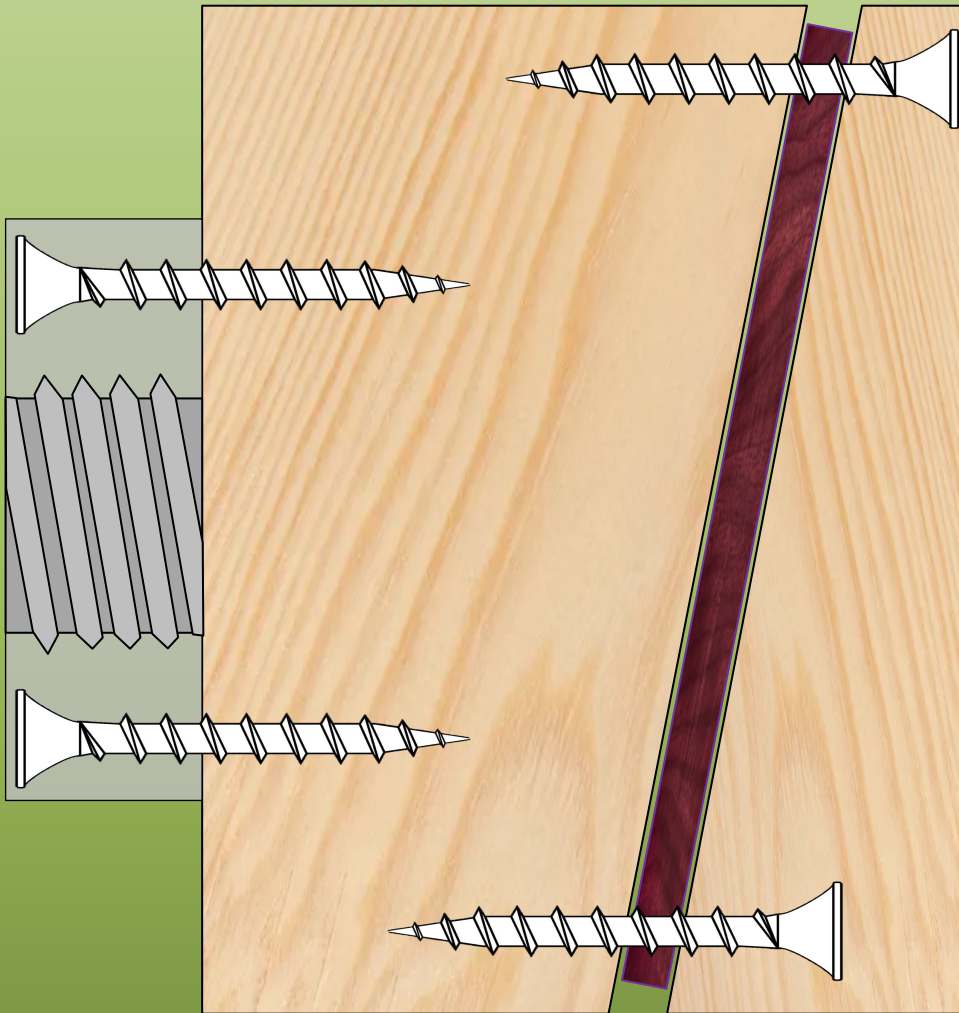


***REMOVE BULK OF WITH A DRILL BIT***

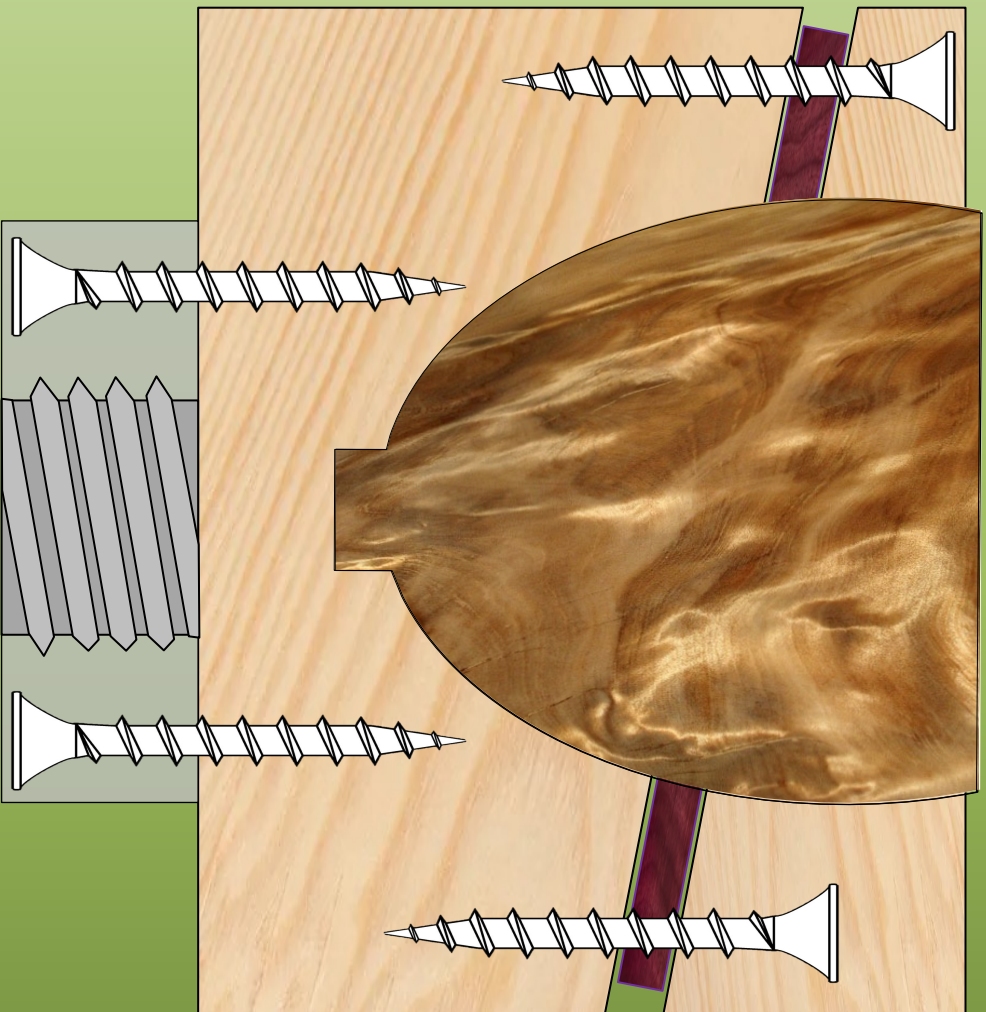


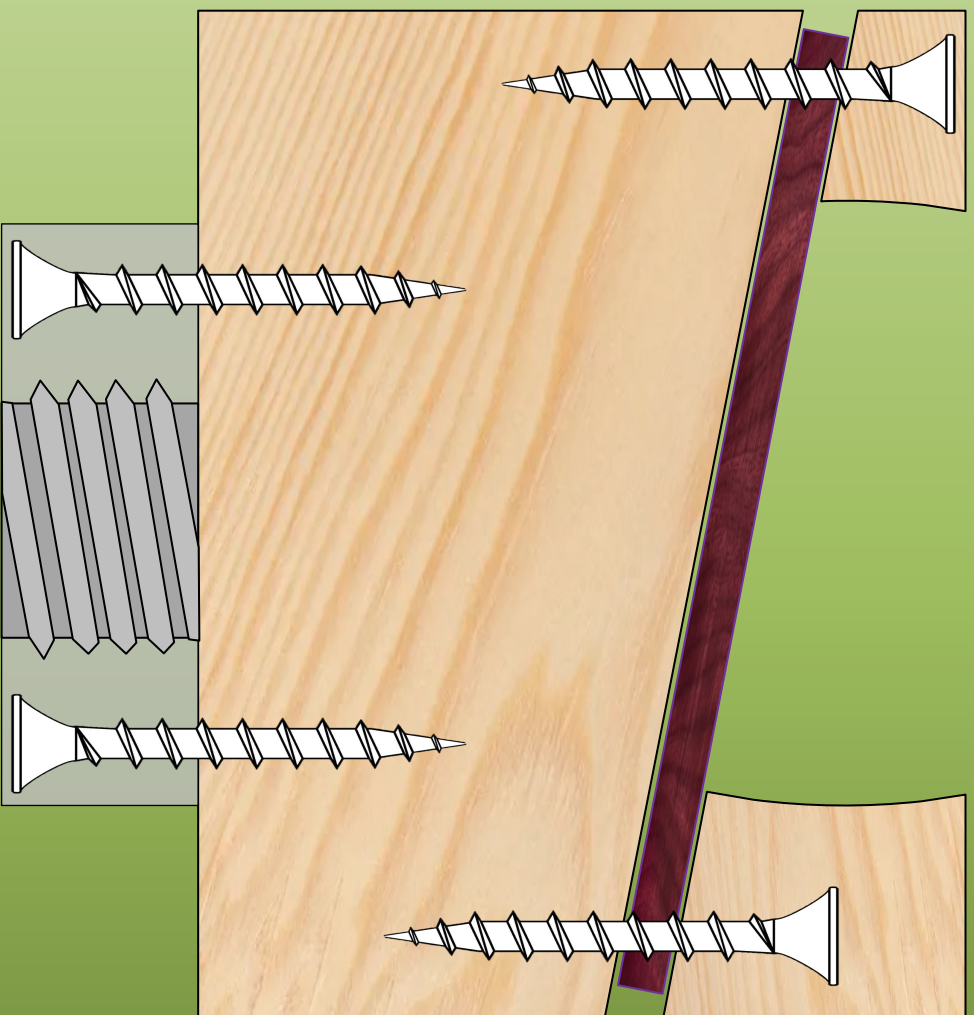

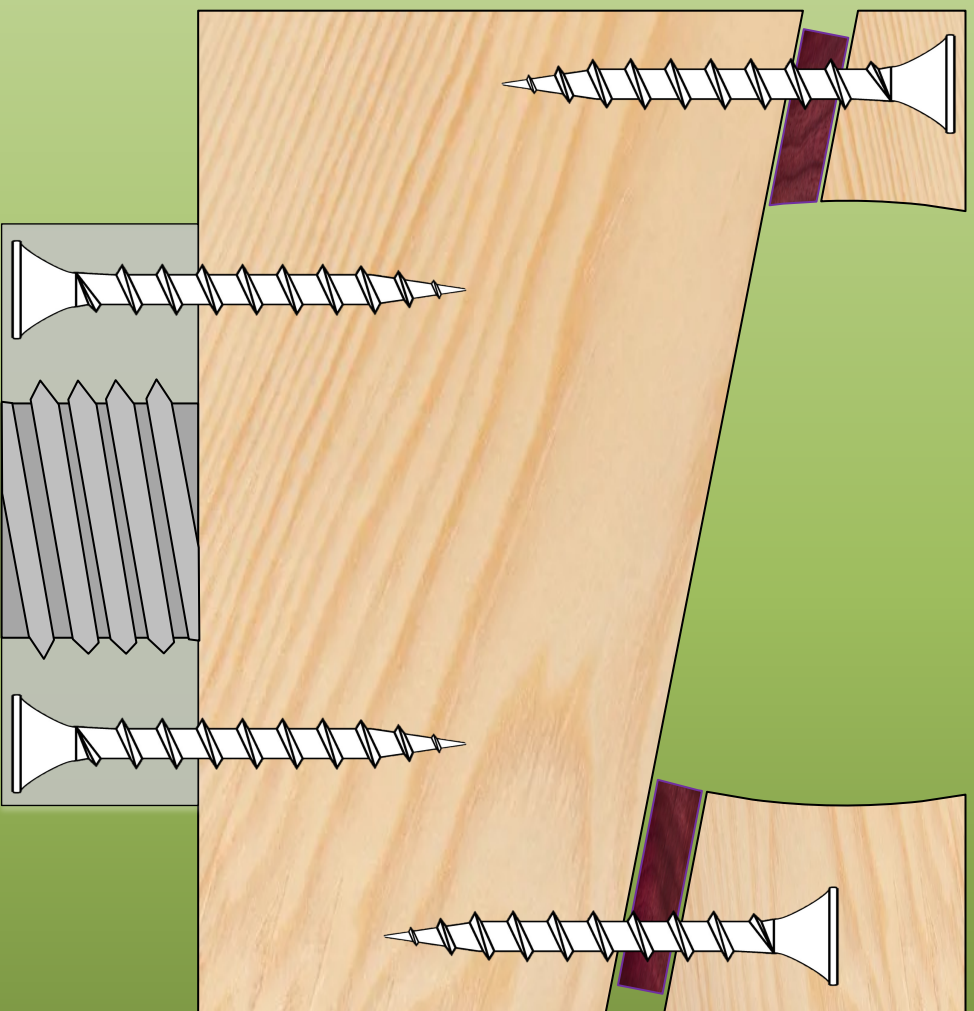

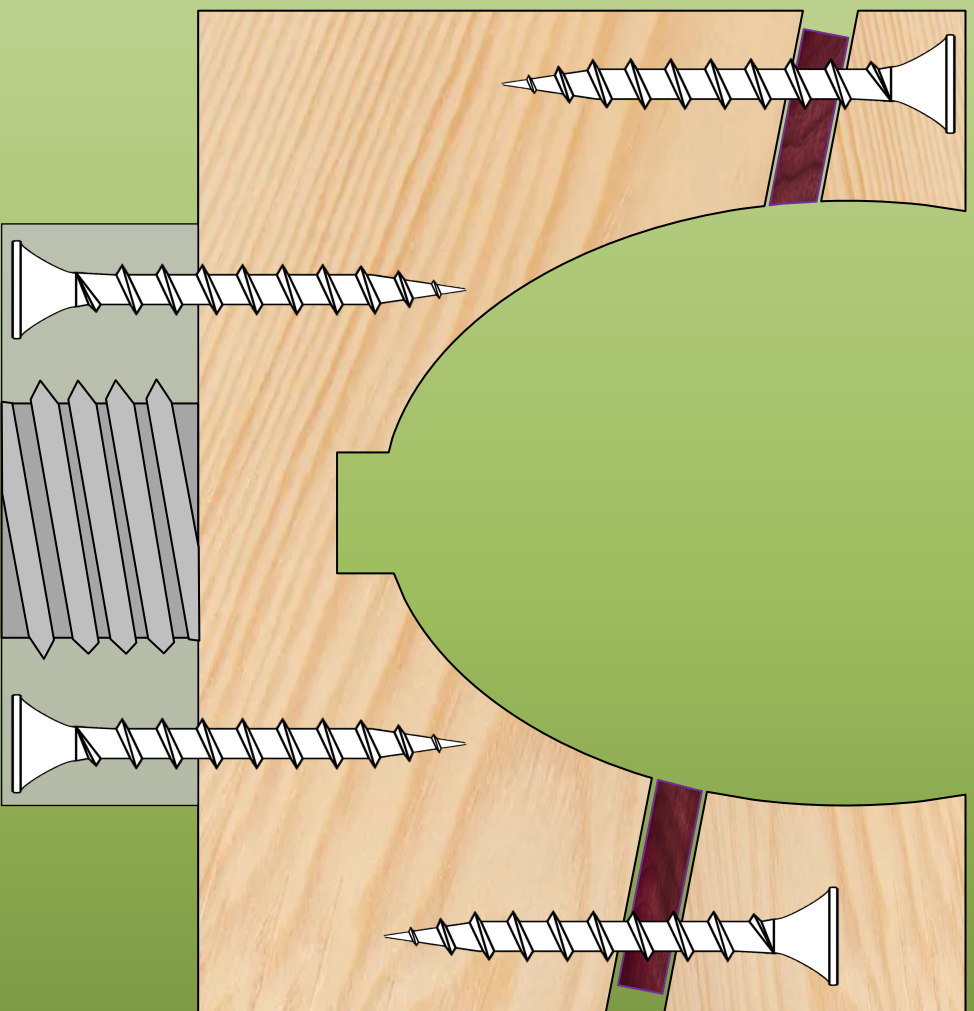

**Optional void can be created below in the shaded area**

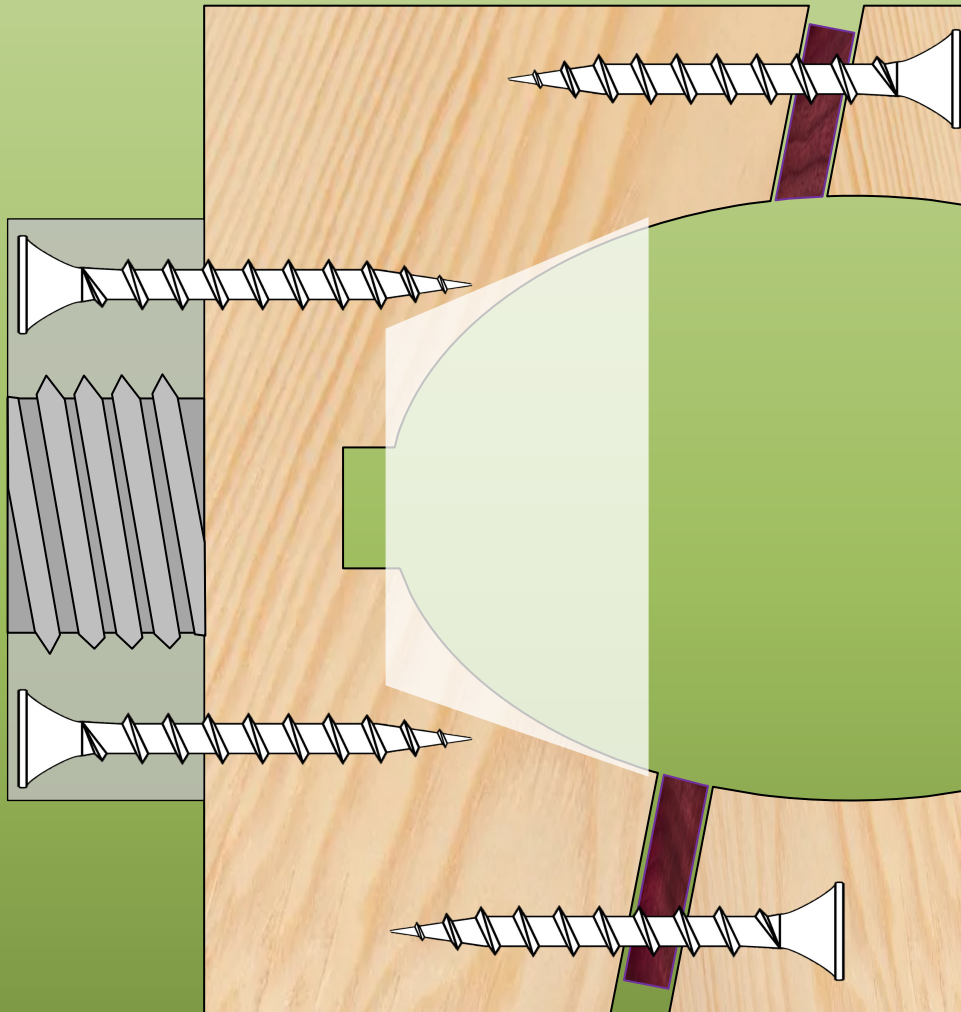

**NB: maintain the blind hole to align the spigot.**

